

INSTALLATION GUIDE

NON-REFILLABLE / 380ML e 12.8 FL OZ

CYLINDER BOTTLE SIZE: 063.3 W 192.4 H (mm)

CURVE BOTTLE SIZE: Ø63.5 L 53.3 W 206.8 H (mm)

RECTANGLE BOTTLE SIZE: 67.6 L x 40 W 203.9 H (mm)

BRACKET SIZE: 43 L 12.2 W 75.8 H (mm)

MATERIAL: HDPE Bottle, PE/PP Pump, & ABS Bracket

IN FO: Tamper-Resistant Bracket, Magnetic Key, & Fluid Indicator Window










CYLINDER




CURVE









RECTANGLE

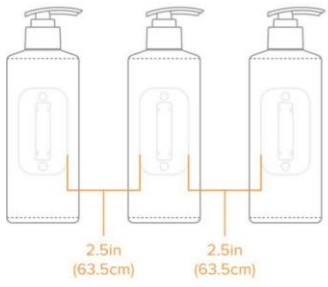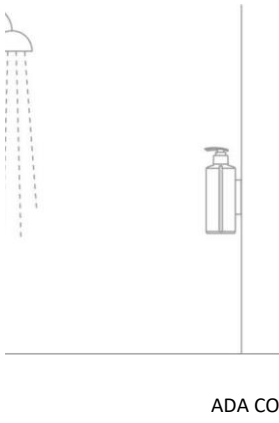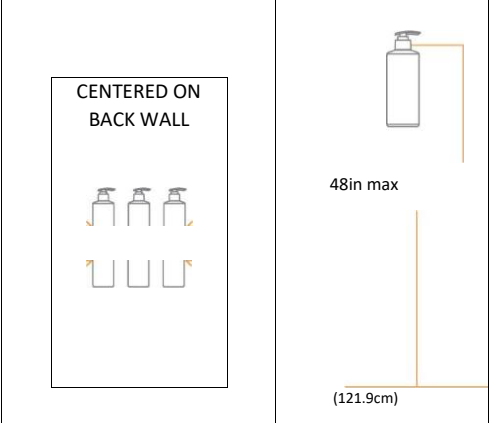

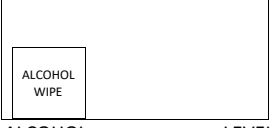FLOATING DISPENSERS INSTALLATION GUIDE

PARTS INCLUDED IN INSTALLATION KIT			NOT INCLUDED)				
(SHAMPOO, CONDITIONER, AND BODY WASH ARE NOT INCLUDED)							
							
(2) WALL ANCHORS	(2) SCREWS	3M	TAPE	(1) KEY	BRACKET	(1) 380ML BOTTLE	

RECOMMENDED PLACEMENT GUIDE	THE SHOWER HEAD
ON THE BACK WALL, OPPOSITE OF	
(NOT TO SCALE)	
	
	
	CENTERED ON BACK WALL
	48in max (121.9cm)
	ADA COMPLIANT

RECOMMENDED TOOLS							
							
ALCOHOL WIPE	LEVEL	TAPE MEASURE	TAPE	CAULK	POWER DRILL	HAMMER	SCREW DRIVER
ADDITIONAL INFO		Do not use a corrosive detergent.					

FLOATING DISPENSERS INSTALLATION GUIDE

Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.
Recommended installation is mounting bracket with both screws and tape.


FLOATING DISPENSERS INSTALLATION GUIDE

1




Clean surface with alcohol wipe.
Make sure surface is fully dry before installation.

2

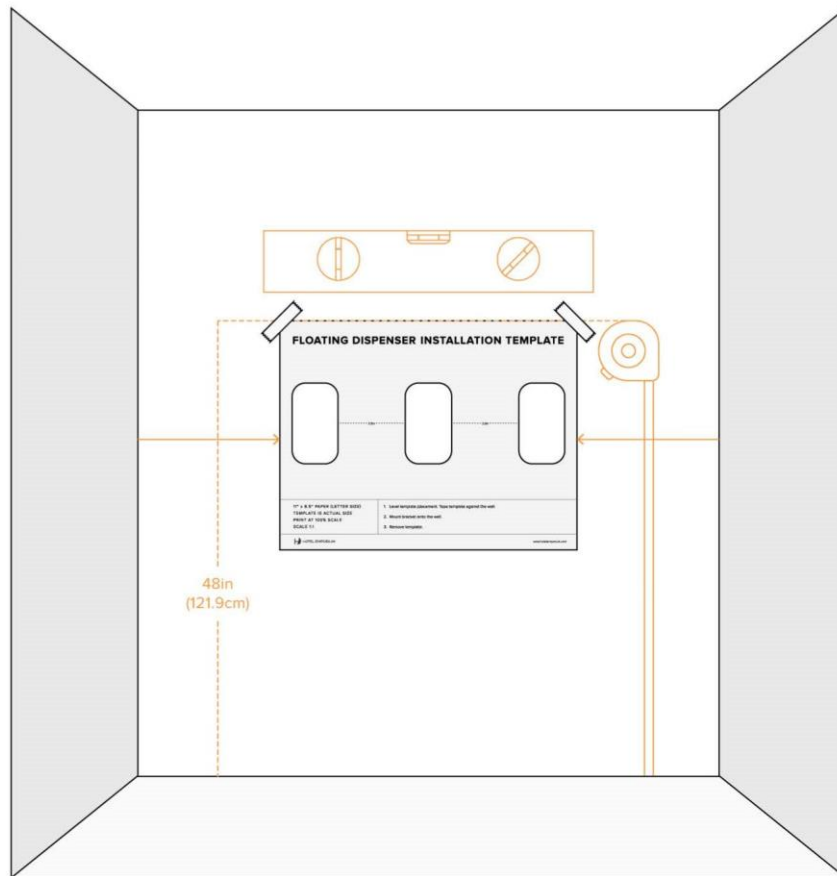


Determine the proper placement of dispenser. Tape template onto the wall and make sure template is level. Recommended height is 48" from the floor to the pump of the dispensers.

FLOATING DISPENSERS INSTALLATION GUIDE

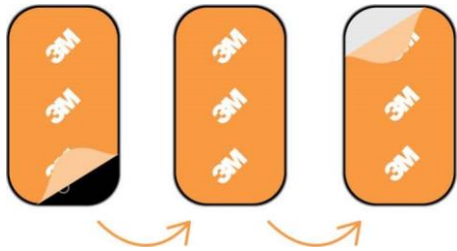


Tape Installation

1. For tape installation, clean back of bracket then 3. adhere the double sided 3M mounting tape to the bracket. Peel film off.
2. Press bracket firmly onto the wall for 30 seconds until it is secured. Repeat process for other brackets. Remove template.

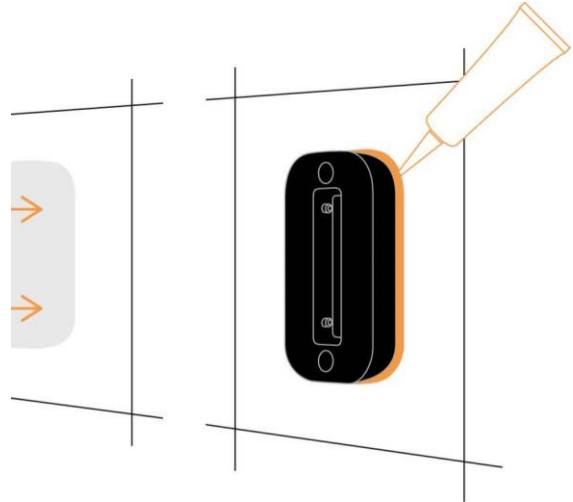

Place a line of adhesive caulk around the bracket to prevent water and grime from getting behind the bracket. Wipe away any excess caulk. Wait 72 hours before inserting the bottles to allow tape to securely set.

FLOATING DISPENSERS INSTALLATION GUIDE

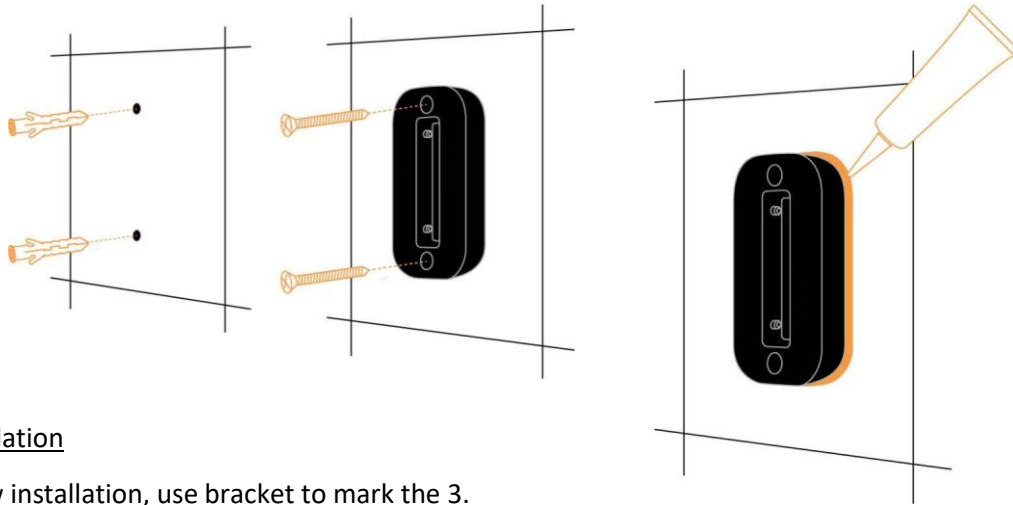


Screw Installation

1. For screw installation, use bracket to mark the 3. bracket holes on the wall. Drill bracket holes into the wall.
2. Screw in wall anchors with your hands, then use a hammer to tap anchors flush into the wall.

4. Place bracket into position on the wall and use a screwdriver to tighten screws in place.

Place a line of adhesive caulk around the bracket to prevent water and grime from getting behind the bracket. Wipe away any excess caulk. Wait 24 hours for caulk to dry.


FLOATING DISPENSERS INSTALLATION GUIDE

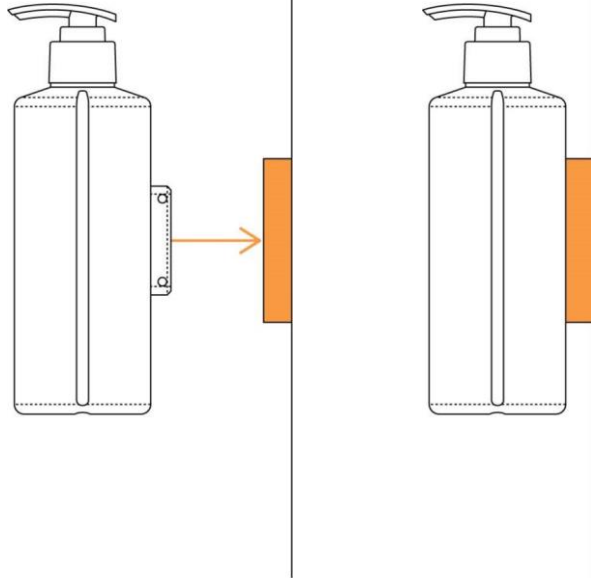

Push the bottle into the bracket where the backing fits into the bracket crevice and it clicks into place.


Dispenser is ready to use!

FLOATING DISPENSERS INSTALLATION GUIDE

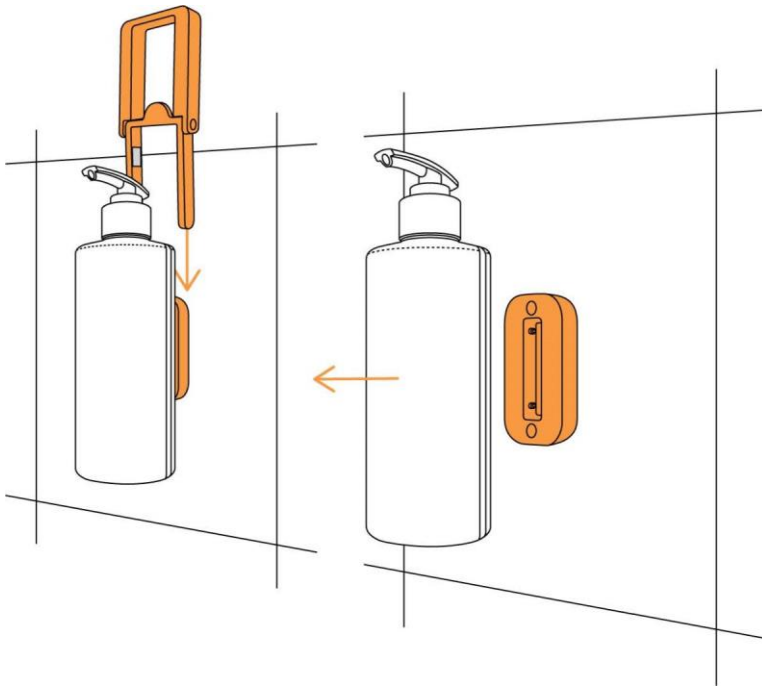

Open the magnetic key and with one hand on the bottle, slide the key to fit the entire sides of the bracket to release the bottle. Remove the emptied bottle from the bracket and replace with a new bottle.

FLOATING DISPENSER INSTALLATION TEMPLATE

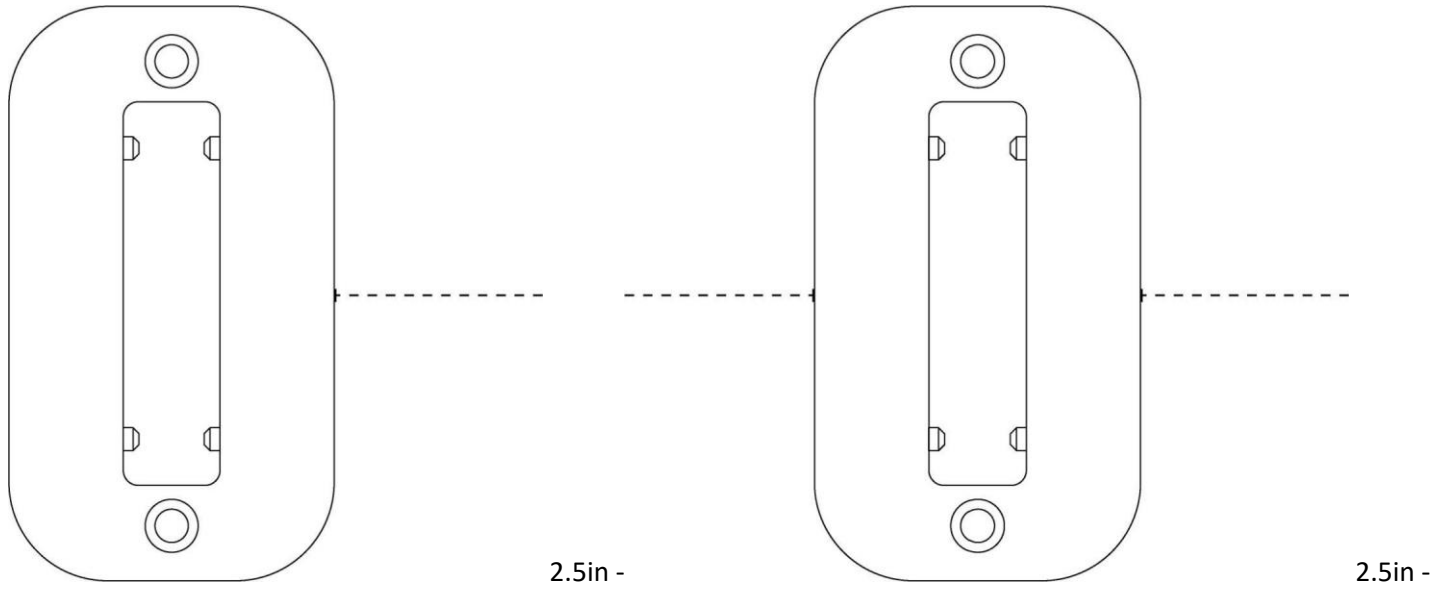

11" x 8.5" PAPER (LETTER SIZE)
TEMPLATE IS ACTUAL SIZE
PRINT AT 100% SCALE
SCALE 1:1

1. Level template placement. Tape template against the wall.
2. Mount bracket onto the wall.
3. Remove template.

