
NON-REFILLABLE / 450ML e 15.2 FL OZ


DISPENSER SIZE: 65 L x 78 w x 249 H (mm)

MATERIAL: PE Bottle & ABS Bracket

IN FO: Tamper-Resistant Bracket, Patented Valve Cap, & Fluid Indicator Window

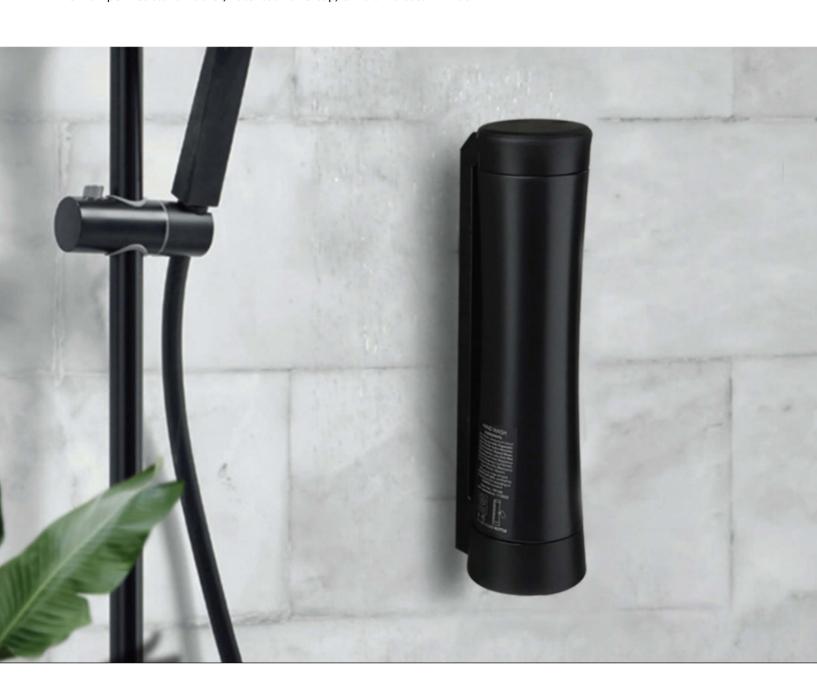


#### PARTS INCLUDED IN INSTALLATION

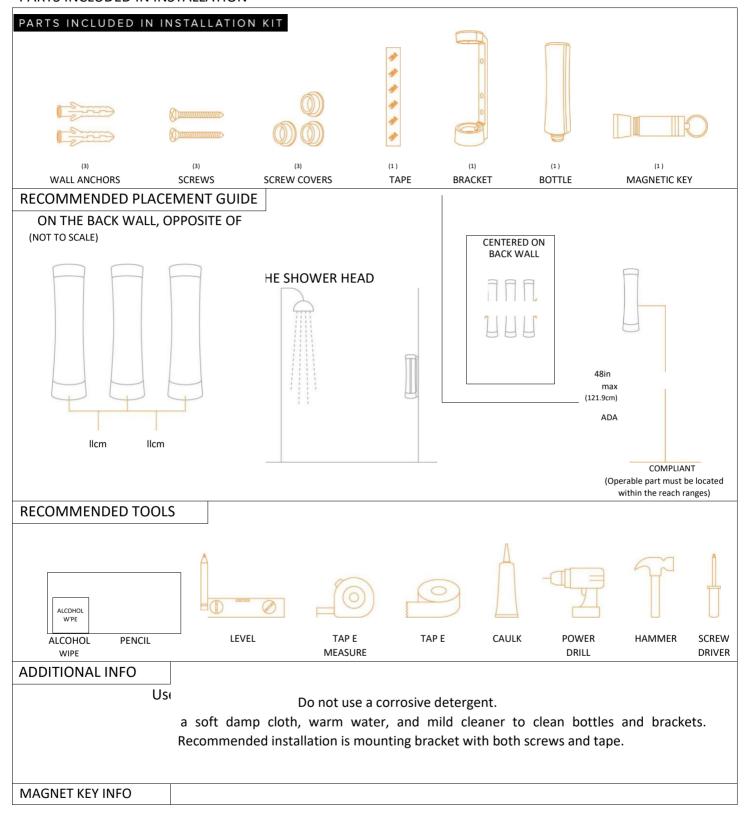

Avoid magnetic key contact from all electronic devices and IC cards. Ask staff to hang magnetic key on the handlebars of the cleaning trolley.




Clean surface thoroughly with alcohol wipe. Make sure surface is fully dry before installation.

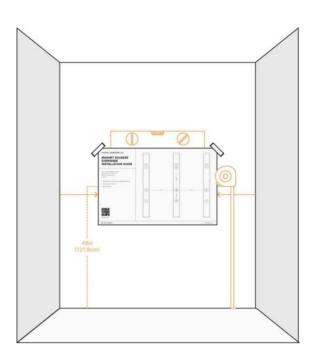

Determine the proper placement of dispenser. Tape template onto the wall and make sure template is level. Recommended height is 48" from the floor to the middle of the dispensers.





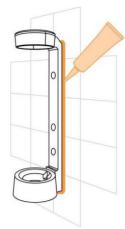


#### Tape Installation


For tape installation, clean back of bracket then 3. Add screw covers into holes on the bracket. adhere the double sided 3M mounting tape to the bracket. Peel film off. 4. Place a line of adhesive caulk around the bracket to prevent water and grime from getting

2. Press bracket firmly onto the wall for 30 seconds behind the bracket. Wipe away any excess caulk. until it is secured. Repeat process for other Wait 72 hours before inserting the bottles to brackets. Remove template. allow tape to securely set.

1.

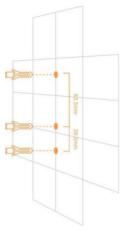




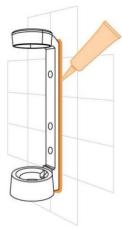

#### Screw Installation

- 1. For screw installation, use bracket to mark the 3. Place bracket into position on the wall and bracket holes on the wall. Drill bracket holes into tighten screws in place. Add screw covers over the wall. the screws.
- 2. Insert wall anchors with your hands, then use a 4. Place a line of adhesive caulk around the hammer to tap anchors flush into the wall. bracket to prevent water and grime from getting behind the bracket. Wipe away any excess caulk. Wait 24 hours for caulk to dry.

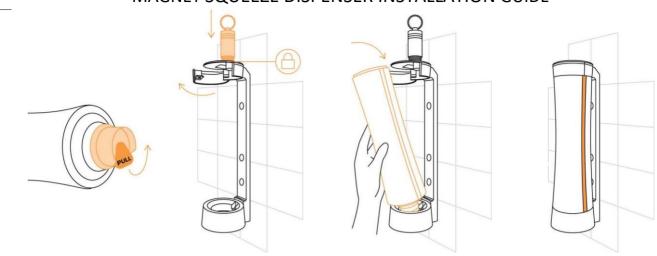

### **Preparing & Replacing Bottles**

Pull the valve cap tab at the bottom of the bottle to prepare bottle for use. Unscrew magnetic key cap and place key on the lock symbol to unlock the bracket. Open bracket arm and place the bottle inside. Close the arm and remove key. Dispenser is ready to use!

To replace bottles, repeat steps above.